
INSTRUCTION MANUAL

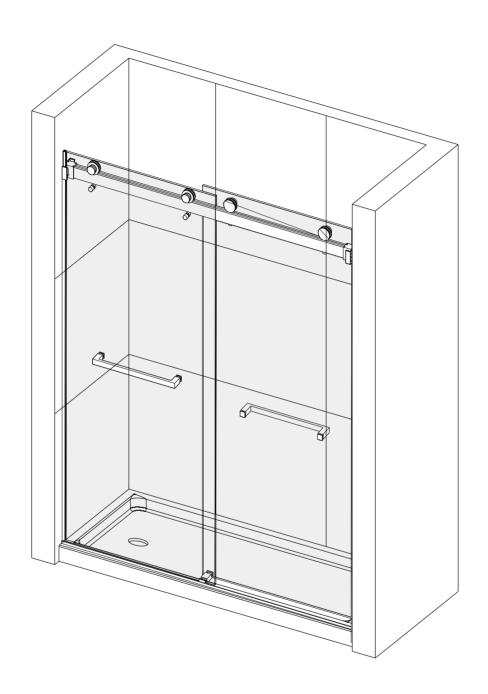



Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

metal parts looking new.

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and
- We recommend wiping the glass panels with a squeegee after each use.


TOOLS REQUIRED

SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
TAPE MEASURE	SCREW DRIVER	6mm&8mm(1/4" & 5/16") DRILL BITS	HACKSAW	SAFETY GLASSES


 $[\]mbox{\ensuremath{\mbox{\$}}}$ Use a 6mm(1/4") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION



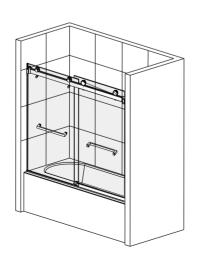



PARTS LISTING

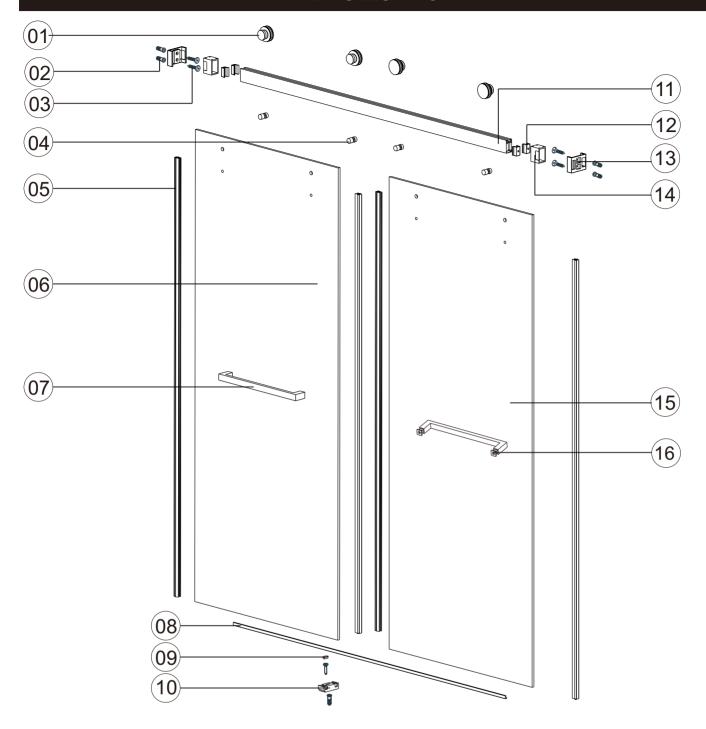



ITEM	PARTS	DIAGRAM	QTY
1	Roller	3	4
2	Wall plugs		5
3	Screw St4x30/St5x40	©	5
4	Anti jumping knob	O	4
5	Door seal		4
6	Sliding door		1
7	Towel bar		1
8	Anti-splash threshold	L	1
9	Floor guide cover cap	9	1

ITEM	PARTS	DIAGRAM	QTY
10	Floor guide		1
11	Rail		1
12	Anti-collision block		4
13	Wall mount bracket	I	2
14	Guide rail bracket		2
15	Sliding door		1
16	Towel bar		1

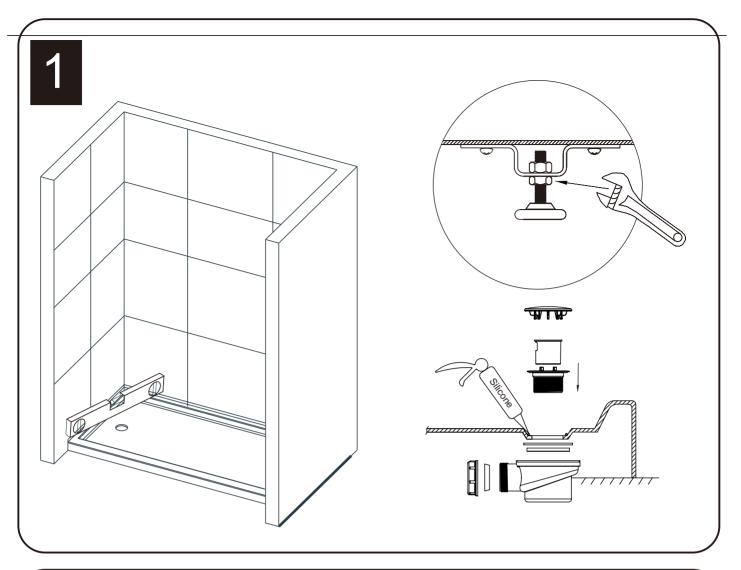


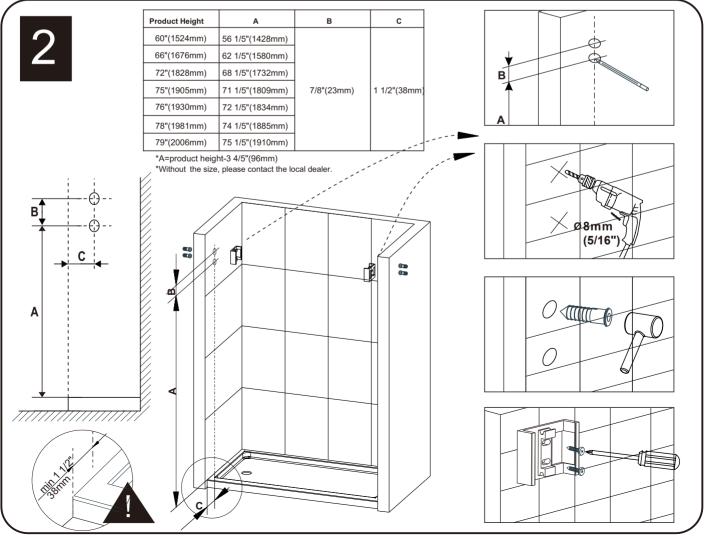


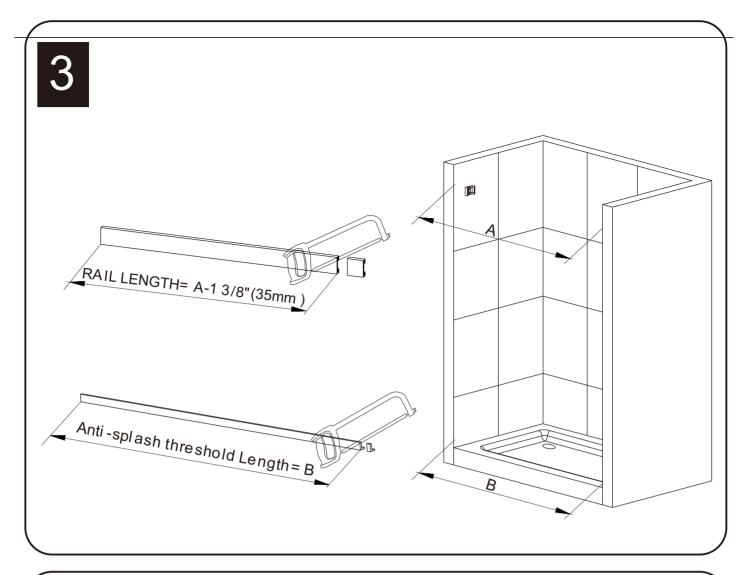


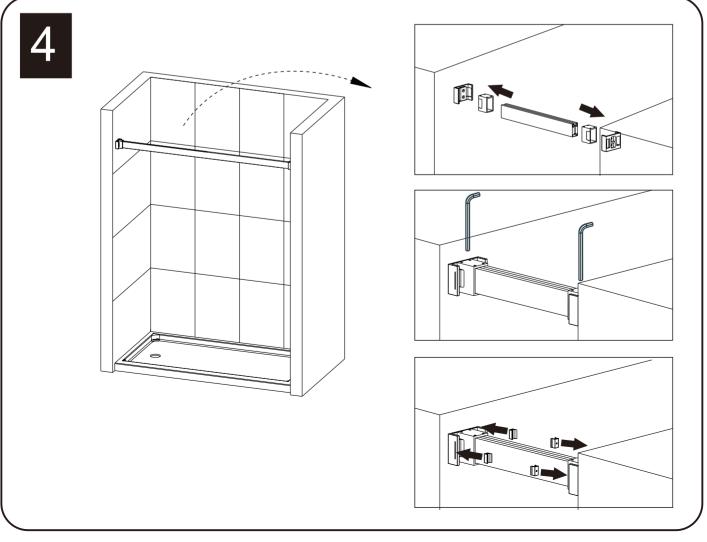



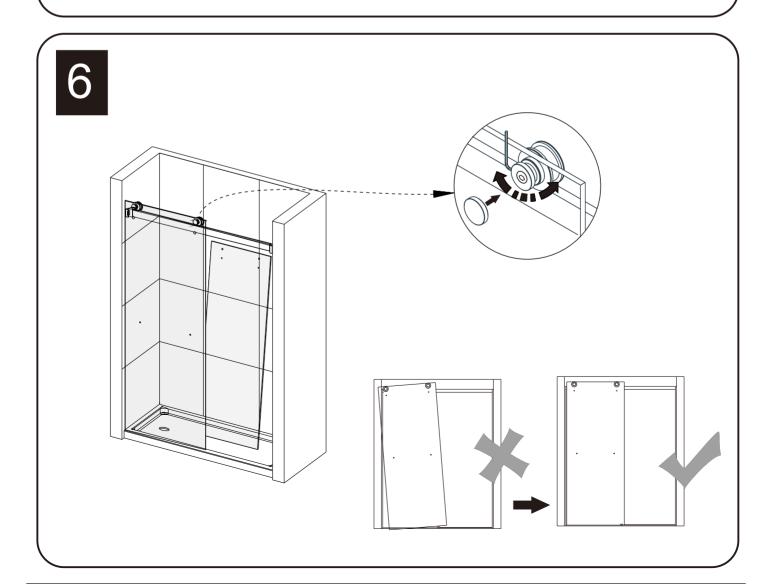

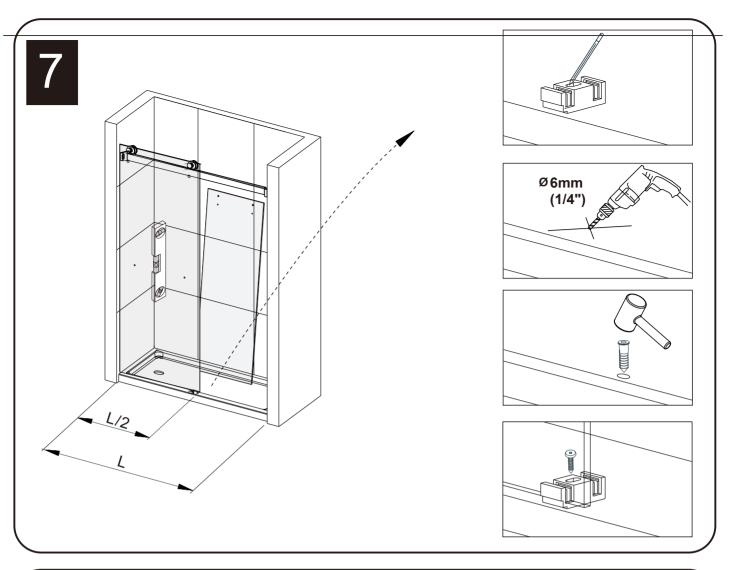

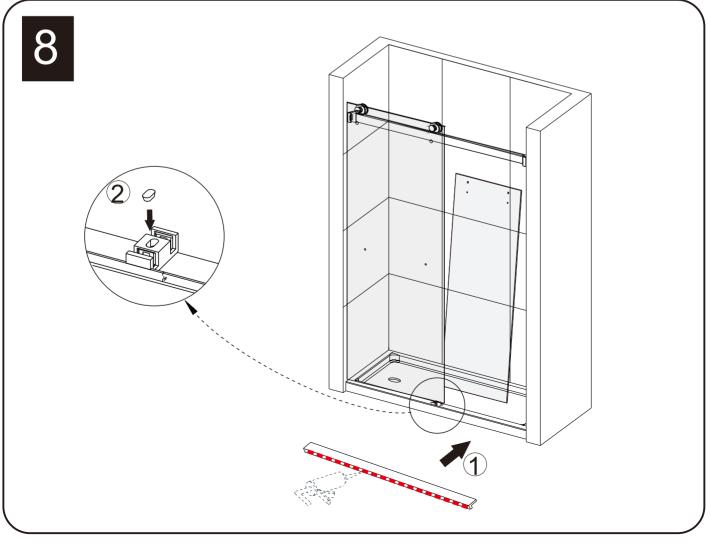



easy-cleaning should toward inside

