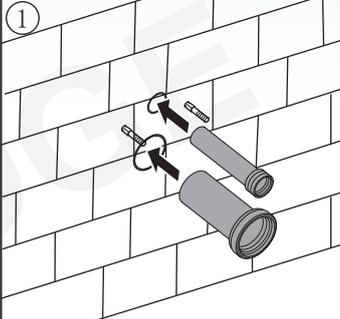
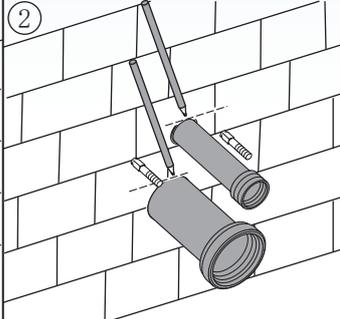
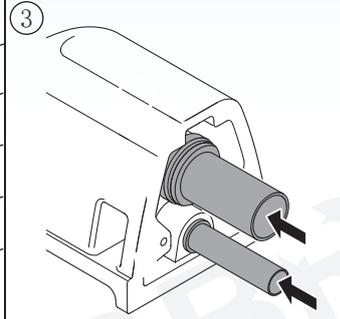
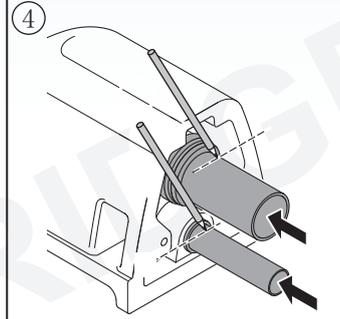
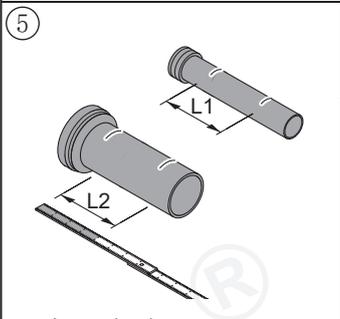
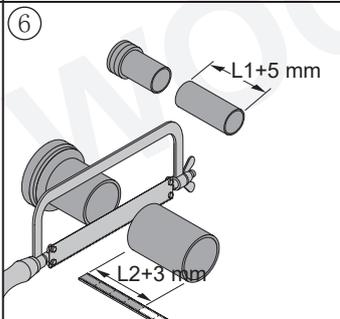
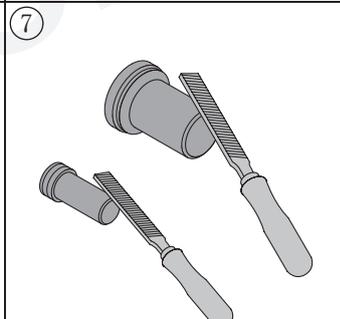
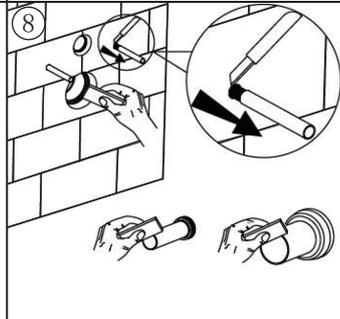
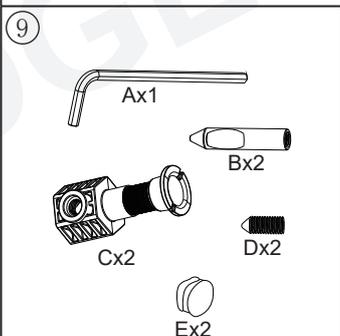
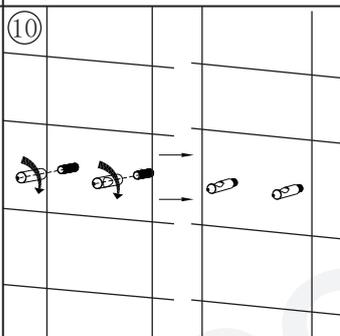
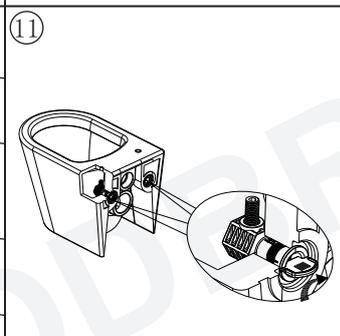
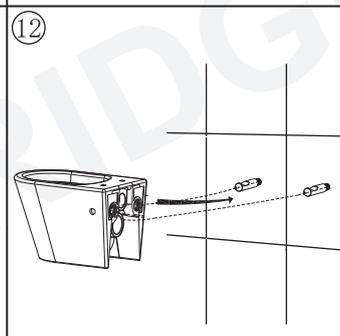
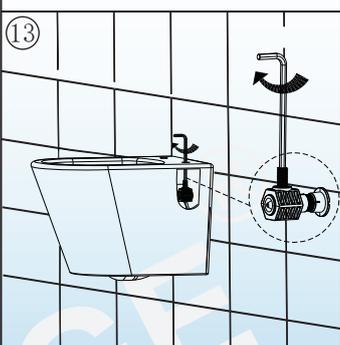


Installation Instructions

WALL-HUNG TOILET

<p>①</p>  <p>Fully insert straight tube into pre-cutting hole on wall and connecting pipe into discharging hole.</p>	<p>②</p>  <p>Use pencil to draw the lines as above picture.</p>	<p>③</p>  <p>Apply lubricant oil on rubber washers on straight pipe and connecting pipe, then insert them to ceramic holes.</p>	<p>④</p>  <p>Draw the lines as above picture.</p>
<p>⑤</p>  <p>As per drawing, L1 is distance between the two lines on straight tube. L2 is distance between the two lines on connecting pipe.</p>	<p>⑥</p>  <p>Cut the straight tube and connecting pipe as per above drawing.</p>	<p>⑦</p>  <p>Gridding the cutting surface to get chamfer angle as per drawing and deburring.</p>	<p>⑧</p>  <p>Apply lubricant on the joint surface on straight tube and connecting pipe.</p>
<p>⑨</p>  <p>Five hardware: Part A.B.C.D.E</p>	<p>⑩</p>  <p>Secure part B onto the screw as the above picture.</p>	<p>⑪</p>  <p>Place part C into the installing hole on the pan.</p>	<p>⑫</p>  <p>Insert the part C into part B.</p>
<p>⑬</p>  <p>Secure and tighten screws (part D) on part C using allen wrench (part A).</p>			

Customer Service Phone: 562-229-0088.

(Monday - Friday 9 AM - 5 PM Pacific Time)

Or Email: help@woodbridgebath.com